

# How to register Fanvil IP phone

Version: V1.1

Release Date: 13<sup>th</sup>,Nov,2021

## Contents

<b>1. Introduction.....</b>	<b>1</b>
1.1. Overview.....	1
1.2. Applicable model.....	1
1.3. Target audience.....	1
1.4. Prerequisite preparation tools.....	1
1.5. Schematic diagram of phone and computer connection.....	1
<b>2. Operation steps.....</b>	<b>2</b>
2.1. Phone screen registration.....	2
2.2. Phone web registration.....	3

# 1. Introduction

## 1.1. Overview

The phone needs to realize incoming and outgoing calls, which can be registered through a SIP account.

## 1.2. Applicable model

Applicable product models: all phones in Fanvil

Applicable version: all versions of applicable models


## 1.3. Target audience

This document mainly guides users how to register a sip account

## 1.4. Prerequisite preparation tools

- ① One Fanvil X4U phone, and connect the phone to the switch, it can automatically obtain the IP address.
- ② Take a PC / Laptop and connect it to the same switch together with the IP phone, make sure that both devices are working on the same local network..

## 1.5. Schematic diagram of phone and computer connection

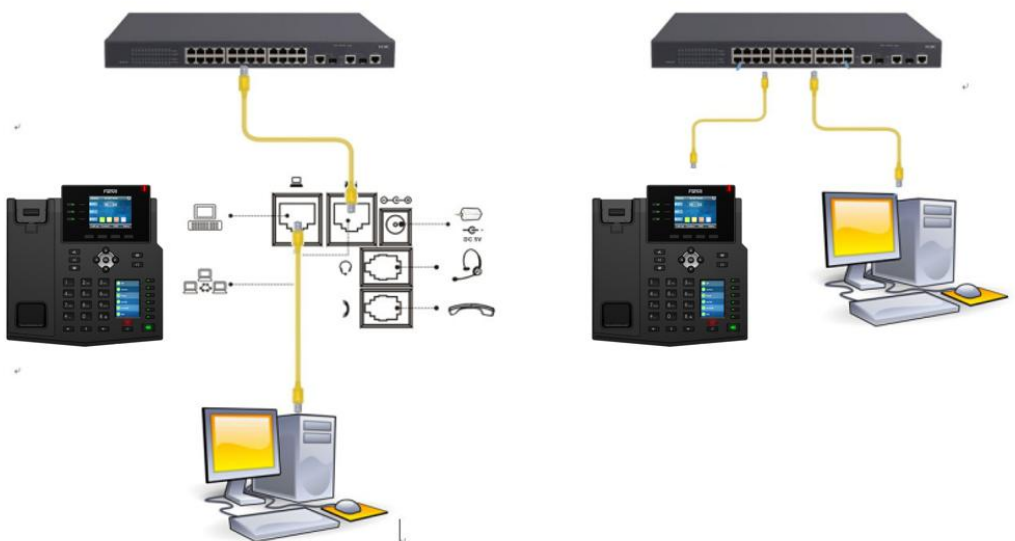

## 2. Operation steps

### 2.1. Phone screen registration

1. Click on the LCD "Menu"->"Advanced Settings" (default password 123)->"Account"->"SIP1"->"Basic Configuration", enter the server address, server port, SIP user name, verify the user name, Verify password, display name, as follows: Figure 1-Figure 7

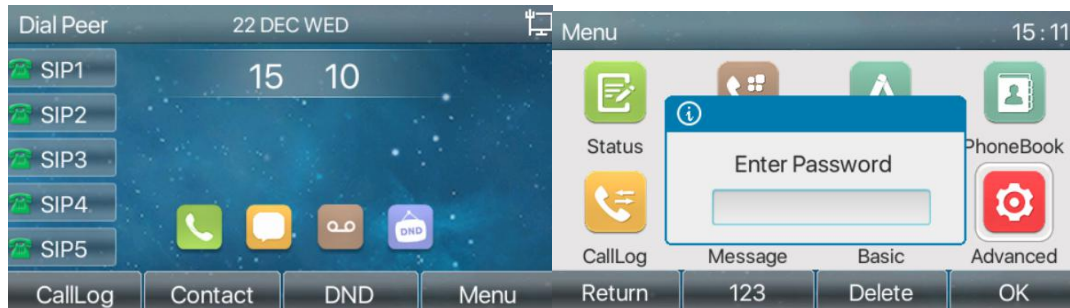


figure 1

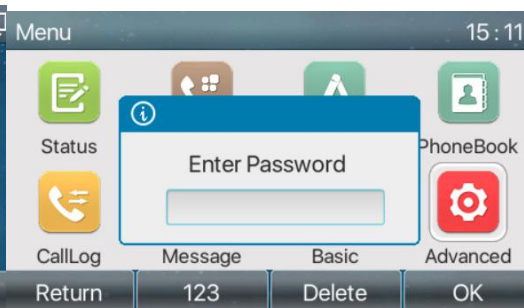


figure 2



figure 3



figure 4

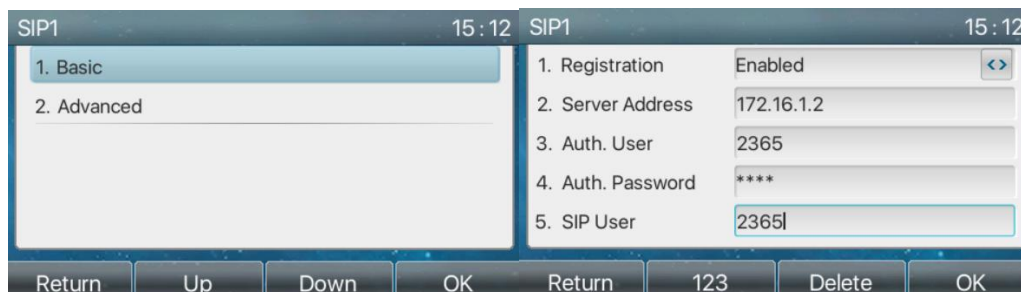


figure 5

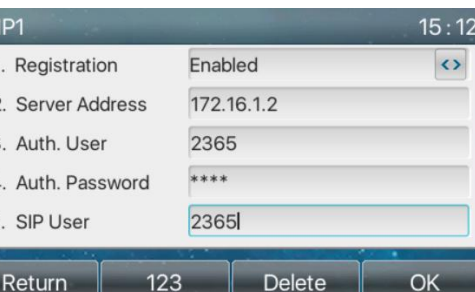


figure 6

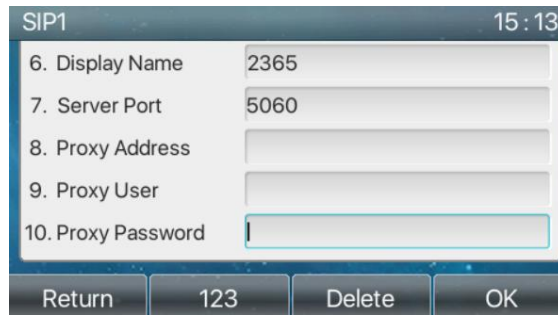



Figure 7

2. Check the configuration status, in "Menu"->"Advanced Settings" (default password 123)->"Account"-check whether the status is registered




## 2.2. Phone web registration


1. Check the IP address of the phone, click "Menu"->"Status" on the LCD screen of the phone, you can check the IP address of the phone

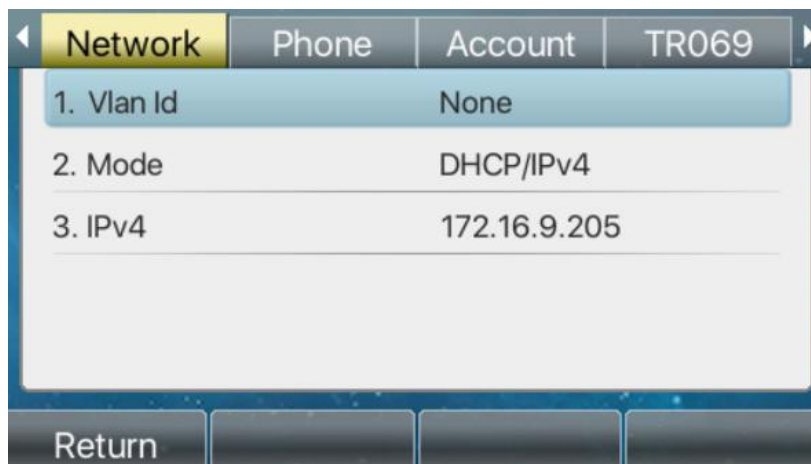

2、Log in to the web interface of the phone, open the browser on the computer, and enter the IP address of the phone in the "address bar"

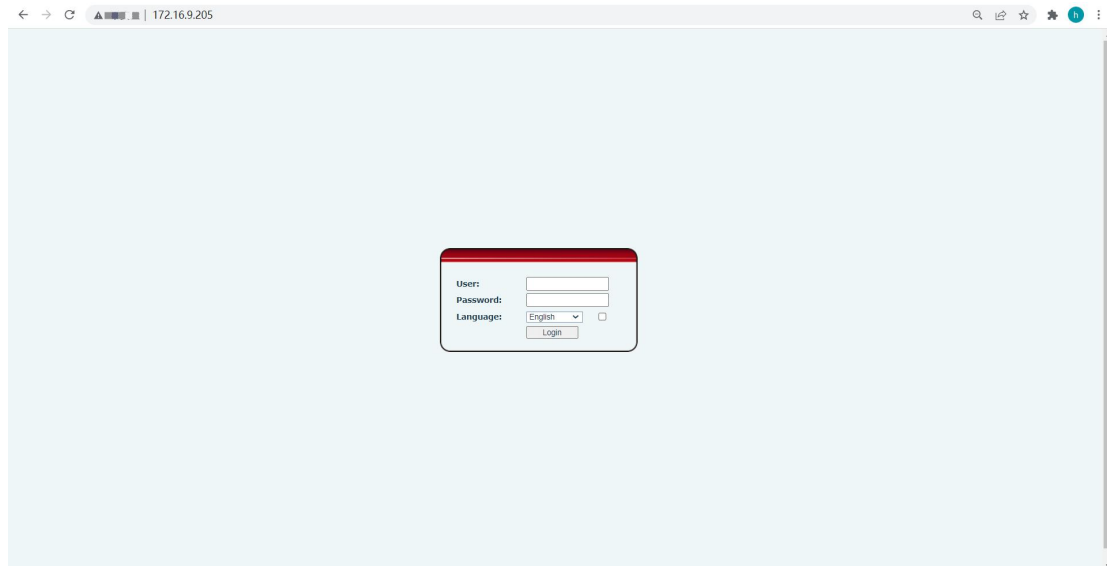

3、Enter the webpage, select "Line"->"SIP"->"Basic Settings", enter the registered account and password, port, server address and other information. Check enable and submit, as shown in the figure below:

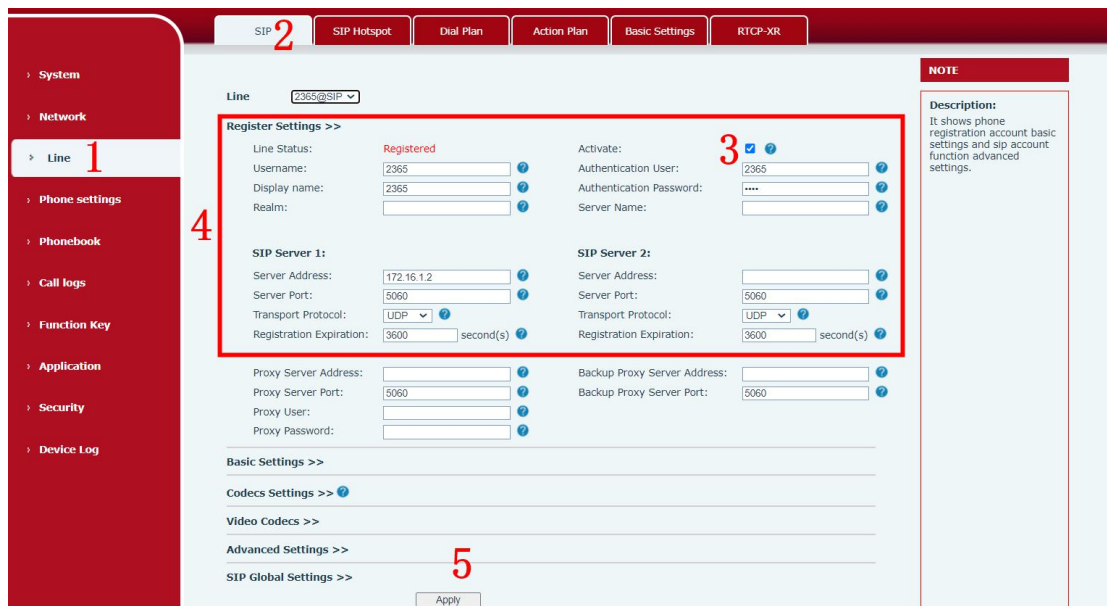

4、 Check the configuration status and check the line status on the "Line" interface. If it is registered, the phone is successfully registered and you can make and receive calls normally

